

Cotton Candy Machine Instructions:



WARNING!

Spinner-Head assembly rotates at 3,450 rpm. Operator must keep hands & face clear of the spinner head. Keep spectators at a reasonable distance.

(Rent A Bounce, LLC is not liable for any injuries due to careless handling and/or reckless operation of this equipment)

Make sure all switches are in the "OFF" position before plugging the equipment into the receptacle.

DO NOT operate machine using an extension cord!

****ADULTS ONLY should operate equipment****

- 1. Be sure machine is on a stable surface.**
- 2. Pour Cotton Candy mix into center of head.**
- 3. Keep heat at $\frac{3}{4}$. (Higher heat makes more, lower heat makes less).**

****DO NOT attempt to adjust, repair or clean machines****

Questions?

**Contact Rent A Bounce at
248-906-8368**